

USER MANUAL

for the illuminated shower enclosure

WHITEWATER LIGHT




RAVAK®

Description of Controls Whitewater LIGHT

The **thermostatic battery** allows to set the water temperature and is equipped with a safety at 38 degrees centigrade.

The **shut-off valve** regulates the amount of the supplied water to the system. The symbols for these functions are on the aluminum column.

The **shower set** allows to put the shower head to the holding knee or the shower bar. The shower bar holder height is also adjustable. The loosening and tightening of the position is performed using the holder screw. The side jets are adjustable for the stream angle in the scope of about +/- 15 degrees centigrade.

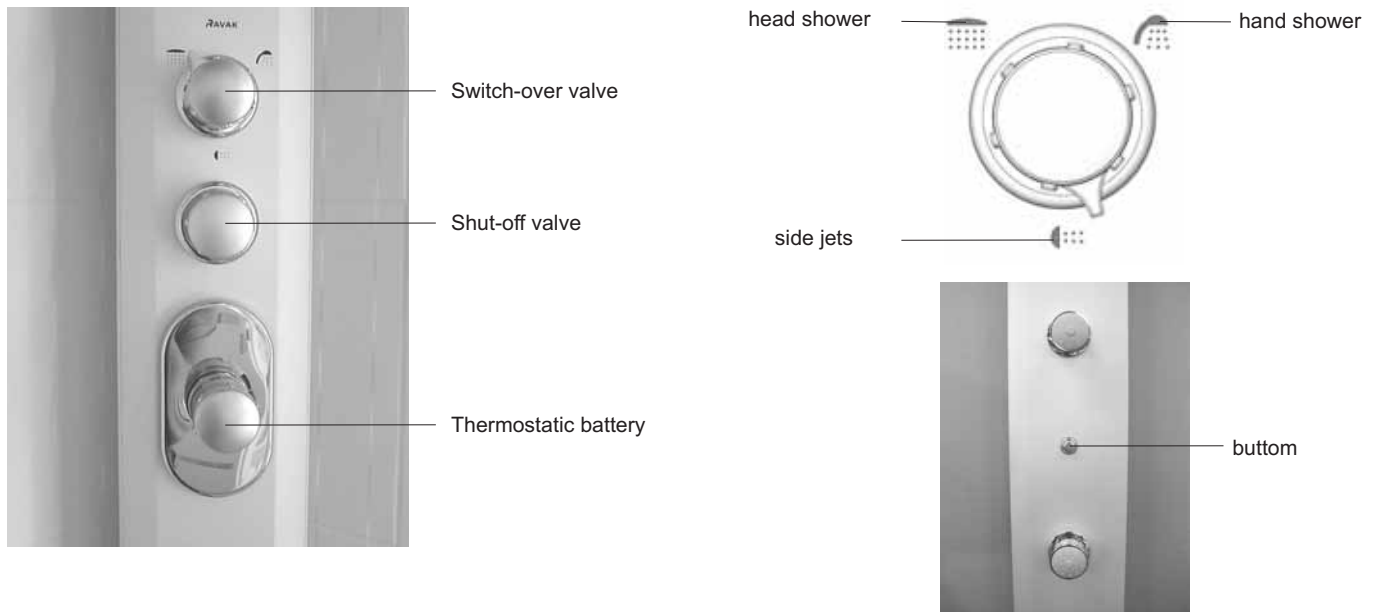

Shower Enclosure with a Light

The switching on and off of the light is performed using the button located on the jet column. When replacing the bulb (12 V, max. 20 W), it is necessary to switch off the power supply first and then remove the protective cover of the light.

DO NOT OVERLOOK!

To keep the correct function of the head shower, clean the bottom side of the rose head with the openings approximately once per month using a soft brush. If furring is formed, wash the rose head surface with a warm vinegar water.

When maintaining the shower enclosure, do not use mechanical abrasives (for instance grinding pastes) or aggressive chemicals (for instance solvents, acetone and so on). The manufacturer is not responsible for the damage caused by an incorrect assembly, use or treatment of the product. The maintenance is carried out only by wiping the varnished or chromium parts, glass and parts using special cleansing detergents. The producer recommends to use RAVAK ANTICALC series: RAVAK ANTICALC CONDITIONER it is an agent, which perfectly restores and maintains all required properties of the surface protective coat of RAVAK ANTICALC; RAVAK CLEANER serves to remove old and tough dirt from the surface of the glass, frames of shower enclosures, enameled as well as acrylate bathtubs, washbowls and water-pipe fittings; RAVAK DESINFECTANT is a special cleaning substance with high antibacterial and fungicide effects. The producer reserves the right to innovate the product. The warranty term is 24 months from the date of sale. All detailed information regarding the assembly, use and maintenance is available at your dealer. When handling the product, make sure that you do not jam your fingers in the gap between the fixed screen and the doors.

How to handle the package material and the product after the end of the useful life:

The usable components of the package, for instance, the cardboard, pasteboard or PE foil should be utilized or offered for utilization or recycling. Unusable components of the packages and product after the end of its useful life must be liquidated safely in accordance with the valid law on waste. After the end of the product useful life, offer the usable components (for instance metals) for a further use and recycling in a manner customary in the place.

RAVAK®

RAVAK a.s., Obecnická 285, 261 01 Příbram I
tel.: +420 318 427 200, 318 427 111 fax: +420 318 427 269
e-mail: smith@ravak.cz, www.ravak.com