

Schema	Suitable concealed faucets
	<p>Direct wall mounting RS 062, NO 062, TD 062, TD F 062, CL 062, CR 064</p> <p>Use R-box RB 070.50 RS 066, NO 066, CR 066, TD 066, TD F 066, CL 066</p>
	<p>Direct wall mounting RS 061, NO 061, TD 061, TD F 061, CL 061</p> <p>Use R-box RB 070.50 RS 065, NO 065, CR 065, TD 065, TD F 065, CL 065</p>
	<p>Direct wall mounting CR 063</p>
	<p>Use R-box Multi RB 071.50 CR 067.00</p>

FAUCETS FLOW VALUES RAVAK									
Flow is indicated in l/min at a pressure of 0.3 MPa									
RAVAK code	Washbasin	Sink	Bidet	Bathtub	Head shower	Hand shower	OUT 1	OUT 2	OUT 3
PU 014.00	12								
PU 015.00	12								
PU 022.00/150				19		11			
PU 033.00/150						22			
TE 022.00/150				17		18			
TE 023.00/150				21		22			
TE 032.00/150						23			
TE 033.00/150						24			
TE 072.00/150						23			
TE 082.00/150				21		26			
TE 091.00/150					19	12			
TE 092.00/150				17	12	10			
TE 093.00/150					14	11			
TD F 011.00	5								
TD F 012.00	5								
TD F 013.00	5								
TD F 014.00	5								
TD F 015.00	5								
TD F 055.00			15						
TD F 022.00/150				19		21			
TD F 032.00/150						21			
TD F 061.00							22	21	
TD F 062.00							26		
TD F 065.00							21	21	
TD F 066.00							22		
TD 011.00	5								
TD 012.00	5								
TD 013.00	5								
TD 014.00	5								
TD 015.00	5								
TD 022.00/150				19		21			
TD 032.00/150						21			
TD 033.00/150						24			
TD 055.00			15						
TD 061.00							22	21	
TD 062.00							26		
TD 065.00							21	21	
TD 066.00							22		
TD 091.00/150					14	11			
CR 011.00	8								
CR 012.00	8								
CR 015.00	8								
CR 016.00		15							
CR 019.00	8								
CR 022.00/150				16		17			
CR 025.00				16		11			
CR 032.00/150						20			
CR 055.00			15						
CR 063.00							20	20	
CR 064.00							20		
CR 065.00							21	20	
CR 066.00							21		
CR 067.00							16	17	17
CR 080.00				21		14			
CR 112.00	7					6			
DS 090.00					14	10,5			

Schema	Suitable concealed faucets
<p>OUT 1</p> <p>Hot Cold</p>	<p>Direct wall mounting RS 062, NO 062, TD 062, TD F 062, CL 062, CR 064</p> <p>Use R-box RB 070.50 RS 066, NO 066, CR 066, TD 066, TD F 066, CL 066</p>
<p>OUT 1</p> <p>Hot Cold</p>	<p>Direct wall mounting RS 061, NO 061, TD 061, TD F 061, CL 061</p> <p>Use R-box RB 070.50 RS 065, NO 065, CR 065, TD 065, TD F 065, CL 065</p>
<p>OUT 1 OUT 2</p> <p>Hot Cold</p>	<p>Direct wall mounting CR 063</p>
<p>OUT 1 OUT 2</p> <p>Hot Cold</p> <p>OUT 3</p>	<p>Use R-box Multi RB 071.50 CR 067.00</p>

FAUCETS FLOW VALUES RAVAK									
Flow is indicated in l/min at a pressure of 0.3 MPa									
RAVAK code	Washbasin	Sink	Bidet	Bathtub	Head shower	Hand shower	OUT 1	OUT 2	OUT 3
CL 011.00	11								
CL 012.00	11								
CL 016.00		8							
CL 022.00/150				15		11			
CL 032.00/150						17			
CL 055.00			10						
CL 061.00							22	23	
CL 062.00							24		
CL 065.00							20	20	
CL 066.00							20		
NO 011.00	17								
NO 012.00	16								
NO 022.00/150				20		22			
NO 032.00/150						24			
NO 055.00			16						
NO 061.00							24	25	
NO 062.00							26		
NO 065.00							22	22	
NO 066.00							23		
RS 011.00	17								
RS 012.00	17								
RS 022.00/150				21		22			
RS 025.00				19		12			
RS 032.00/150						22			
RS 051.00/150	19					21			
RS 055.00	17								
RS 061.00							24	24	
RS 062.00							26		
RS 065.00							21	21	
RS 066.00							22		
SN 011.00	16								
SN 012.00	16								
SN 015.00	16								
SN 016.00	16								
SN 022.00/100				15		17			
SN 022.00/150				17		17			
SN 032.00/100						20			
SN 032.00/150						22			
SN 041.00/100	18								
SN 041.00/150	18								
WF 025.00				25		11			
KM 016.00		14							
KM 017.00		7							
FM 016.00		18							
FM 080.00				19		13			
FM 081.00				20		14			
BM 011.00	11					6			
BM 040.00						11			